

UTAH GAS OP LTD  
FEDERAL #22-15  
SW/SE, SEC. 22, T2S, R101W  
FED LEASE #COC-126218  
API #05-103-09794  
RIO BLANCO CO., COLORADO  
NEAREST PUBLIC ROAD: CR-27  
LAT. 39.855246 LONG. -108.717263  
EMERGENCY PH: #1-970-693-6021  
LOCAL 911

UTAH GAS CORPORATION  
natural gas

LOADING AND UNLOADING INSTRUCTIONS

1. Vehicle Operator shall supervise loading or unloading AT ALL TIMES. Drivers are not permitted to remain in the vehicle during loading or unloading.
2. Use appropriate PPE.
3. Observe windsock if present.
4. Park vehicle upwind, if possible.
5. Set brakes.
6. Shut off all electrical systems.
7. Hook up ground cable.
8. Connect loading hose.
9. Load or unload vehicle.
10. Close all valve caps, disconnect hoses, and safely manage any remaining liquids.
11. Replace all valve caps after pumping is finished and make sure all connections are isolated and capped.
12. Disconnect ground cable and safely exit.

SPECIAL NOTICE  
• Report all spills, leaks, safety hazards, or malfunctions immediately. 970-693-6021

NO SMOKING OR OPEN FLAMES

PRODUCED WATER

970-693-6021