

Utah Gas Corp.

natural gas
970-693-6021-911

CAPACITY

UTAH GAS OP LTD
FEDERAL #22-12
NW/SW. SEC. 22, T2S, R101W
FED LEASE: FEE
API #06-103-09821
RIO BLANCO CO., COLORADO
NEAREST PUBLIC ROAD: CR-27
LAT. 39.859789 LONG. -108.724526
EMERGENCY PH. #1-970-693-6021
LOCAL 911

UTAH GAS CORP.

natural gas

1. Vehicle Operator shall supervise loading or unloading AT ALL TIMES. Drivers are not permitted to remain in the vehicle during loading or unloading.
2. Use appropriate PPE.
3. Observe windsock if present.
4. Park vehicle upwind, if possible.
5. Set brakes.
6. Shut off all electrical systems.
7. Hook up ground cable.
8. Connect loading hose.
9. Load or unload vehicle.
10. Close all valve caps, disconnect hoses, and safely manage any remaining liquids.
11. Replace all valve caps after pumping is finished and make sure all connections are isolated and capped.
12. Disconnect ground cable and safely exit.

• Report all spills, leaks, safety hazards, or malfunctions immediately. 970-693-6021-911

NO SMOKING OR OPEN FLAMES