


Location and Rig Layout For
Capstar Rig # 311

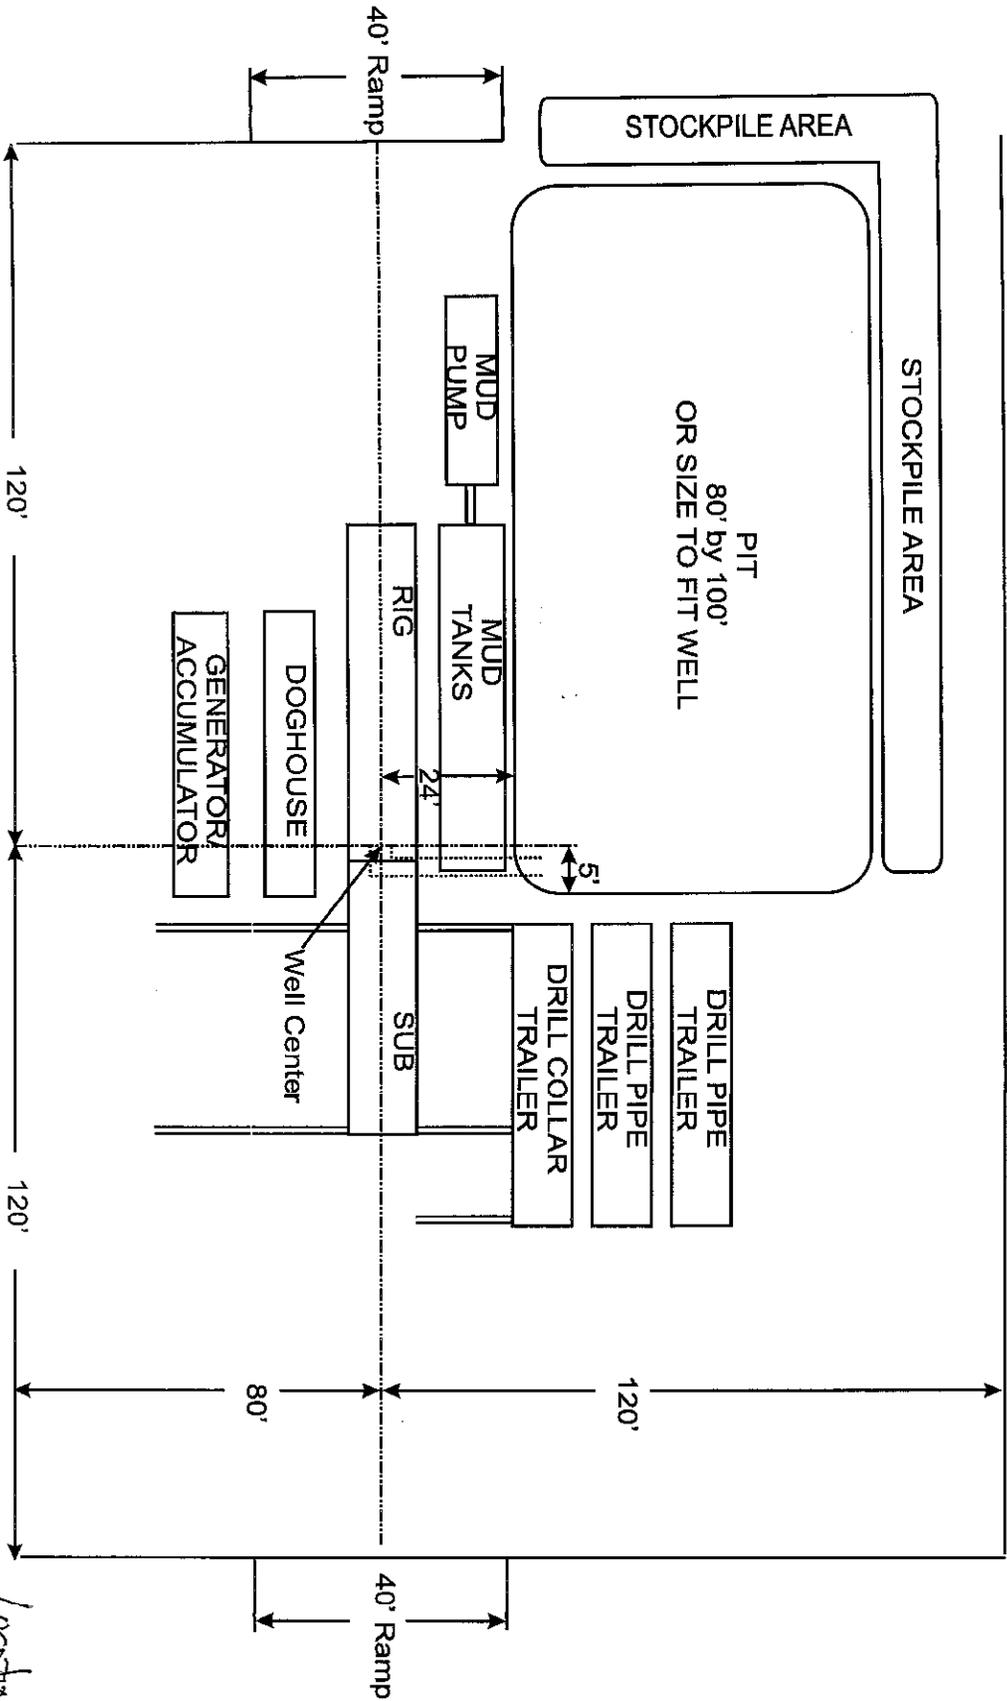

- NOTES:
- Make Pits 6' Deep
 - Pits need to be in the cut.
 - Push up a divider in the middle of the pit shown.
 - Rip a 2' deep by 2' wide ditch as shown by the dotted line.
 - Truck access on each end of the location 0°- 30°.

Location Drawings