

1. Phase I – Rough Grading & Earthwork




2. Phase I - Form and Pour Foundations



3. Phase II – Install secondary containment spray-on application to all foundations prior to setting tanks to ensure an impermeable liner once Step 5 is complete



4. Phase II – Install T-101, T-106, T-105, and Ancillary Equipment

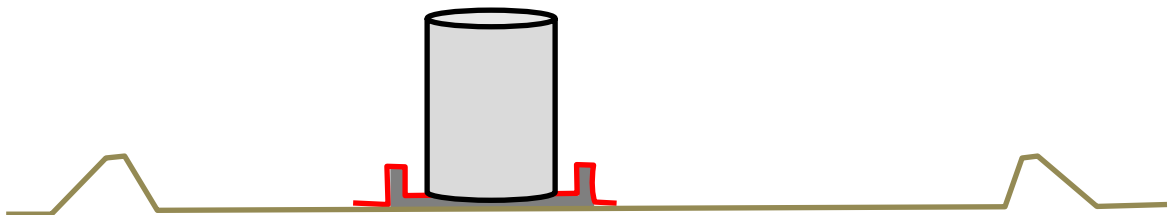

5. Phase II - Install secondary containment spray-on application to the remaining area of the site. When complete, the liner will extend from approximately ½ up the outward facing slope of the pad berm in all directions and overlap with previously installed liners under each tank. The spray on application creates a continuous, impermeable membrane over the entire site without seams or gaps in lining.

