


Wellbore Diagram After Plugging

National Brand

42-301 50 SHEETS EYE-EASE® - 5 SQUARES
42-302 100 SHEETS EYE-EASE® - 5 SQUARES
42-309 200 SHEETS EYE-EASE® - 5 SQUARES

Anschutz State 5-62-25-0108 BH

SST #17

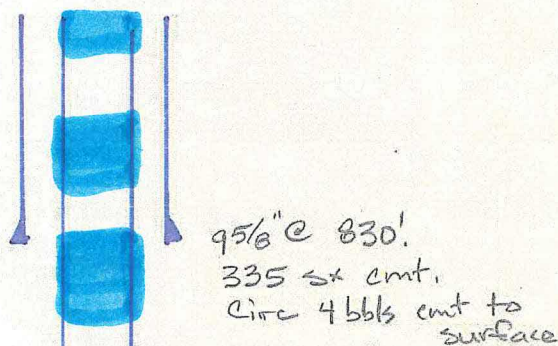

Plan to spot cement plugs as follows!

Cement Plug #1 5600'-5400' (200')
40 sx 15.8# cmt

Cement Plug #2 880'-780' (100')
20 sx 15.8#

Cement Plug #3 400'-300' (100')
20 sx 15.8#

Surface Plug 30'-0'
10 sx 15.8#

Backoff @ +/- 5600'

KOP @ 5644'

T/ Niobrara 5933'

7" @ 6668'
396 sx head
175 sx tail
Circ cmt to surf. 3 bbls.

cut APC
7538'
Worked up
hole 30'

Perf @ 9382'

9420'-
Bit @ 9425' worked up to 9400'

TD
10713'
6 1/8" hole

Bottom Sharon Springs /
Top Nio @ 5968' TVD 62°

Attempted another cut @ 7063'. DP wouldn't move.