


# CURRENT WELLBORE DIAGRAM

**Stegas 23-15 #1**      NESW Sec. 15-11S-53W 6PM  
Pronghorn Operating LLC (#10422)

API #: 05-073-06271  
Lincoln Cty, CO

Drilled & Abandoned by Murfin Drilling in 1993

8-5/8" 24# csg @ 517'  
Cmt to surface w/ 310 sx

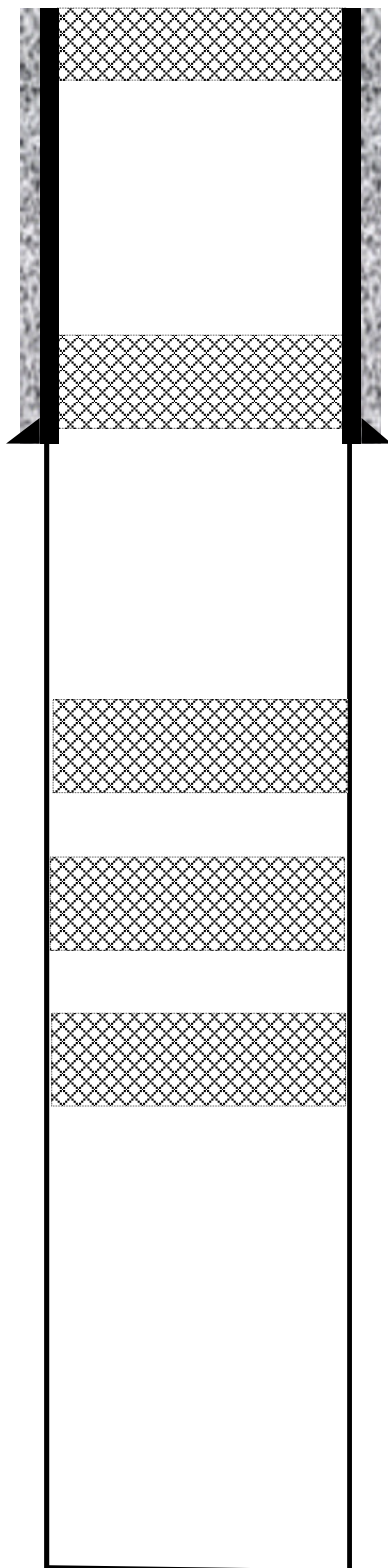

15 SK Cement Plug      0'-23'      8/30/1992

35 SK Cement Plug      380' - 432"      8/30/1992

40 SK Cement Plug      1912' - 2045'      8/30/1992

40 SK Cement Plug      4000' - 4100"

40 SK Cement Plug      6600' - 6700'

7-7/8" Hole @ 7270' TD


**PROPOSED WELLBORE DIAGRAM**

**Stegas 23-15 #1**      NESW Sec. 15-11S-53W 6PM  
Pronghorn Operating LLC (#10422)

API #: 05-073-06271  
Lincoln Cty, CO

**Re-Entry Objective: Drill out cement plugs to original TD, run & cement 5.5" casing, perforate & test multiple objectives**

8-5/8" 24# csg @ 517'  
Cmt to surface w/ 310 sx

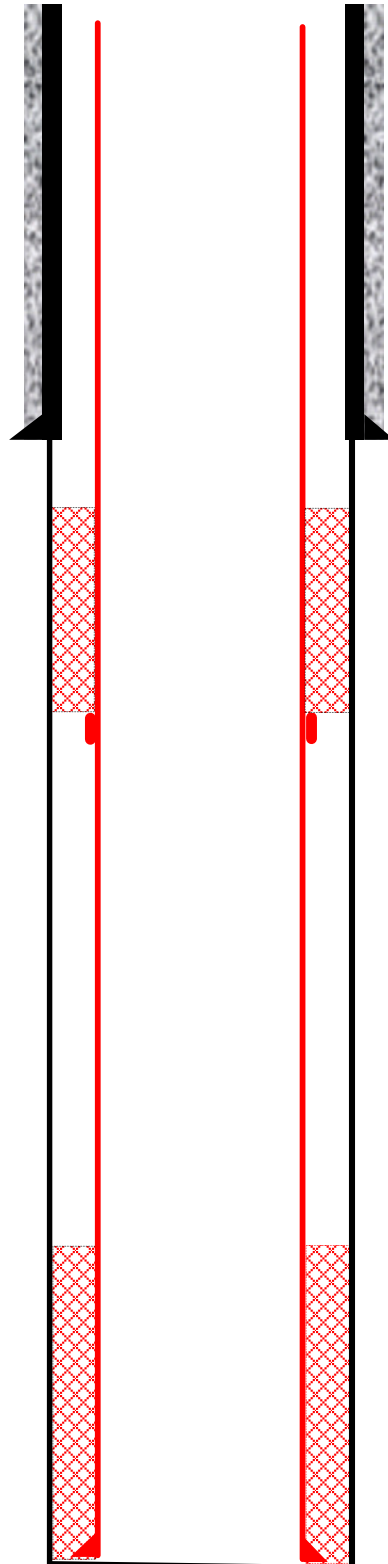

Stage Tool:  
requirements

\*TBD per APD stage cement

Est TOC

5500'

7-7/8" Hole @ 7270' TD

5.5" 15# casing @ 7270' cemented with  
200 sx CMT