


Blomenkamp #4 05-121-05567

proposed wellbore

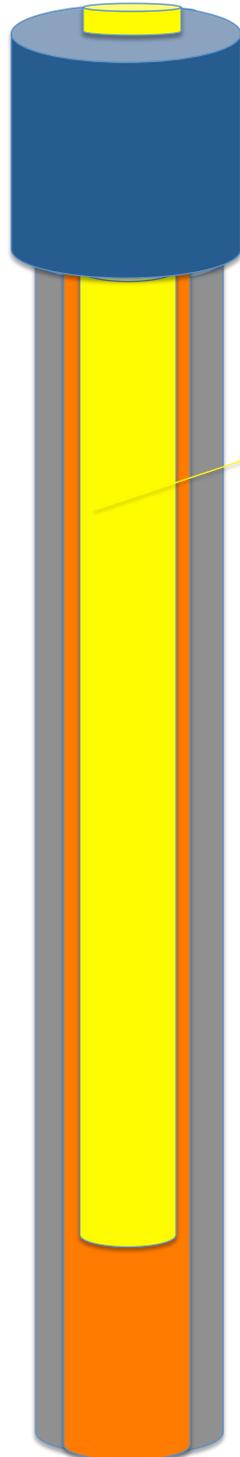

9 5/8 96 Lb  
Surface Casing set  
107 to surface with  
65 sks

Set CIBP at 4970  
Run 4 1/2 liner surface to 4970 and  
cement with 105 sks cement.  
Drill out BP and run production  
tubing.

5 1/2 production casing  
surface to 5085 with 200 sks

J Sand perforations  
4981-87

TD 5086